



Natural Wallcovering

INSTALLATION ADDENDUM – SYCAMORE 1/2

Please be advised, this addendum pertains to the wallcovering listed below. It is meant to be used in tandem with our full installation instructions for natural, handcrafted wallcoverings located at hartmannforbes.com/install

SYCAMORE SERIES

WLLK47-30 Sycamore – Sage


CHARACTERISTICS OF SPECIALTY WALLCOVERING

- This wallcovering is handcrafted. There will be irregularities.
- The thickness may be inconsistent and will not line up horizontally or vertically
- Due to the thickness of this wallcovering, please use an appropriate wallcovering cutting blade
- Side match



INSTALLATION INSTRUCTIONS

- Hang wallcovering as it comes off the roll — do not reverse hang (*see illustration at right*)
- Make a note on the back of each strip to indicate the TOP. Stay consistent in aligning pieces with the TOP as the header
- DO use a soft smoothing brush and brush lightly, or smooth softly with your hands
- DO NOT use a hard flat smoothing tool
- If a piece of cork should peel away from the backing, use 3M Crazy Glue to gently glue back in place

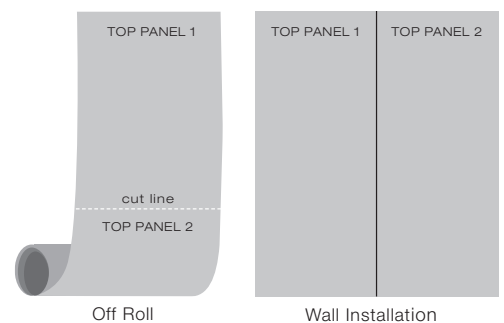

If you have any questions before, during or after installation, please contact Customer Relations at 888.582.8780 or at hfc@hartmannforbes.com

HARTMANN&FORBES ASSUMES NO RESPONSIBILITY FOR THE INSTALLATION

HARTMANN&FORBES®

©2022 HARTMANN&FORBES INC. INWALLK47-922



Natural Wallcovering

INSTALLATION ADDENDUM – SYCAMORE 2/2

WLLK47-30 Sycamore – Sage



① Sycamore has a selvage edge and will need to be trimmed.



② Using a sharp cutting blade, trim 1/8"-1/4" from vertical stitching



③ Leaving a finished edge



④ Apply appropriate paste evenly, especially near edges, to the back of the wallcovering, taking care not to get adhesive on face of wallcovering. Allow wallcovering paste to become tacky prior to hanging – timing will vary depending on the temperature and humidity of the room.



⑤ Align pattern as you hang wallcovering with panels side-by-side, noting the "TOP" of each panel.



⑥ Using a brush or roller, smooth out the wallcovering as it adheres to the wall.

If you have any questions before, during or after installation, please contact Customer Relations at 888.582.8780 or at hfcr@hartmannforbes.com

HARTMANN&FORBES ASSUMES NO RESPONSIBILITY FOR THE INSTALLATION

HARTMANN&FORBES®

© 2022 HARTMANN&FORBES INC. INWALLK47-922