



# Natural Wallcovering

## INSTALLATION ADDENDUM – MADELEINE

Please be advised, this addendum pertains to the wallcoverings listed below, and is meant to assist in tandem with our full installation instructions for natural, handcrafted wallcoverings located at [hartmannforbes.com/installation-instructions](http://hartmannforbes.com/installation-instructions)

MADELEINE SERIES: WLMS77-30 Linden, WLMS77-55 Teal, WLMS77-54 Sage

### CHARACTERISTICS OF SPECIALTY WALLCOVERING


These wallcoverings are handwoven and hand-finished. There will be irregularities in the weave and the finish.

### INSTALLATION INSTRUCTIONS

1. Wallcovering is 36" wide with untrimmed edges, and will require cutting a precise trim line with a straight edge and a very sharp razor blade. Change blades often.
2. Pay special attention to the embroidery trim lines that will match side-by-side.
  - A) Left side: trim edge just shy of vertical embroidered line, take care to not cut into embroidery (see image)
  - B) Right side: trim up to the horizontal lines (see image)
3. Butt horizontal lines up to the vertical line by overlapping wallcovering just slightly.
4. DO NOT USE THIN ADHESIVE\* Thinned adhesive will bleed through embroidery



Untrimmed

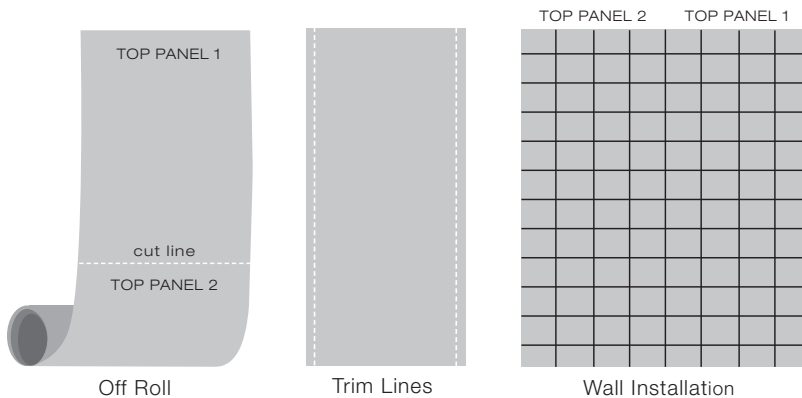

If you have any questions before, during or after installation, please contact Customer Relations at 888.582.8780 or at [hfor@hartmannforbes.com](mailto:hfor@hartmannforbes.com)

HARTMANN&FORBES ASSUMES NO RESPONSIBILITY FOR THE INSTALLATION

**HARTMANN&FORBES®**